

Oven

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com

CONTENTS

Safety information	2	Care and cleaning	19
Product description	4	What to do if...	21
Daily use	5	Environment concerns	21
Helpful hints and tips	9		

Subject to change without notice



SAFETY INFORMATION

Before the installation and use, read this manual carefully:

- For your personal safety and the safety of your property
- For the respect of the environment
- For the correct operation of the appliance.

Always keep these instructions with the appliance also if you move or sell it.

The manufacturer is not responsible if incorrect installation or use results in damage.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved. Children shall not play with the appliance.
- Keep all packaging away from children. There is the risk of suffocation or physical injury.
- Keep children and animals away from the appliance when the door is open or the appliance is in operation. There is the risk of injury or other permanent disability.
- If the appliance has Child lock or Key lock function, use it. It prevents children and animals from accidental operation of the appliance.

General safety

- Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.
- Do not let the appliance stay unattended during operation.
- Switch off the appliance after each use.

Installation

- Only an approved electrician can install and connect the appliance. Contact an approved service centre. This is to prevent the risks of structural damage or physical injury.
- Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance. If necessary, contact the supplier.
- Remove all packaging, stickers and layers from the appliance before first use. Do not remove the rating plate. It can invalidate the guarantee.
- Make sure that the appliance is disconnected from the power supply during the installation.
- Be careful when you move the appliance. The appliance is heavy. Always use safety gloves. Do not lift the appliance by the handle.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- You must have correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- Before the installation, make sure that the kitchen cabinet has the recess dimensions applicable.
- Make sure that the appliance is installed below and adjacent safe structures.
- Keep the minimum distances to the other appliances and units.
- The appliance cannot be positioned on a base.

- Built in ovens and built in cooking surfaces are attached with special connection system. To prevent damage to the appliance, only use an appliance with the appliances from the same manufacturer.

Electrical connection

- The appliance must be earthed.
- Make sure that the electrical data on the rating plate agree with your domestic power supply.
- Information on the voltage is on the rating plate.
- Always use a correctly installed shock-proof socket.
- Do not use multi-way plugs, connectors and extension cables. There is the risk of fire.
- Do not replace or change the mains cable. Contact the service centre.
- Make sure not to squash or cause damage to the mains plug (if applicable) and cable behind the appliance.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug – if applicable.

Use

- The appliance is only for domestic use. Do not use the appliance for commercial and industrial use.
- Only use the appliance for domestic cooking tasks. This is to prevent physical injury to persons or prevent damage to property.
- Do not use the appliance as a work surface or storage surface.
- The interior of the appliance and the accessories become hot during use. There is the risk of burns. Use safety gloves when you insert or remove the accessories or pots.
- Be careful when you remove or install the accessories to prevent damage to the oven enamel.
- Always stay away from the appliance when you open the door while the appliance is in operation. Hot steam can release. There is the risk of skin burns.
- To prevent damage or discoloration to the enamel:

- do not put any objects directly on the appliance floor and do not cover it with aluminium foil;
- do not put hot water directly into the appliance;
- do not keep moist dishes and food in the appliance after you finish the cooking.
- Discoloration of the enamel has no effect on the performance of the appliance
- Do not apply pressure on the open door.
- Always close the appliance door when you cook, even while grilling.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the appliance from the power supply.
- Before maintenance, make sure that the appliance is cold. There is the risk of burns. There is the risk that the glass panels can break.
- Keep the appliance clean at all times. A build-up of fats or other foodstuff can result in a fire.
- Regular cleaning prevents the surface material from deteriorating
- Use a deep baking tray for very moist cakes to prevent that fruit juices cause stains that can be permanent.
- For your personal safety and the safety of your property, only clean the appliance with water and a soap. Do not use flammable products or products that can cause corrosion.
- Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, abrasive sponges and stain removers
- If you use an oven spray, follow the instructions from the manufacturer.
- Do not clean the glass door with abrasive cleaning agents or metal scraper. Heat resistant surface of the inner glass can break and shatter.
- When the door glass panels are damaged they become weak and can break. You must replace them. Contact the service centre.
- Be careful when you remove the door from the appliance. The door is heavy!
- Do not clean catalytic enamel (if applicable).

Risk of fire

- Open the door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air. There is the risk of fire.
- Do not let sparks or open flames come near the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products, and/or fusible objects (made of plastic or aluminium) in, near or on the appliance.

Pyrolytic cleaning

- Do not leave the appliance unattended during Pyrolytic cleaning.
- Do not try to open the door and do not cut the power supply during Pyrolytic cleaning.
- Keep children away during pyrolytic cleaning. The appliance becomes very hot. There is the risk of burns.
- During pyrolytic cleaning, stubborn dirt can cause discoloration to the enamel. Discoloration to the enamel has no effect on the performance of the appliance

Oven lamp

- Disconnect the appliance from the power supply before the replacement of the oven lamp. There is the risk of electrical shock!

Service centre


- Only an approved engineer can repair or work on the appliance. Contact an approved service centre.
- Use only original spare parts.

Disposal of the appliance

- To prevent the risk of physical injury or damage
 - Disconnect the appliance from the power supply.
 - Cut off the mains cable and discard it.
 - Discard the door catch. This prevents children or small animals from being closed inside of the appliance. There is the risk of suffocation.

PRODUCT DESCRIPTION

General overview

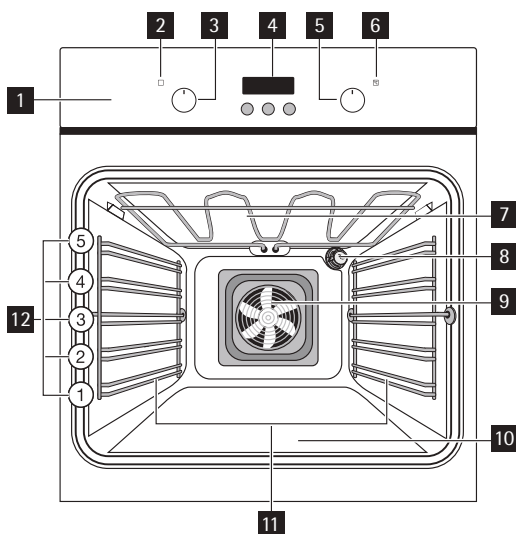

1 Control panel

2 Power indicator

- 3 Control knob for oven functions
- 4 Display
- 5 +/- Control knob
- 6 Power indicator
- 7 Heating element
- 8 Oven lamp
- 9 Fan and rear wall heating element
- 10 Bottom heat
- 11 Oven shelf runners, removable

12 Shelf positions

Oven accessories

- **Oven shelf**
For cookware, cake tins, roasts.
- **Flat baking tray**
For cakes and biscuits.
- **Deep roasting pan**
To bake and roast or as pan to collect fat.

DAILY USE

Warning! Refer to "Safety information" chapter.


Initial Cleaning


- Remove all parts from the appliance.
- Clean the appliance before first use.

Important! Refer to chapter "Care and Cleaning".

Setting the time

i The oven only operates after time set.

1. Push the Selection button (refer to section "Clock function") again and again until the function indicator Time of day  flashes.

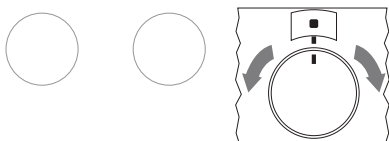

2. Use the + / - knob to set the time. After approx. 5 seconds, the flashing stops and the display shows the time of day set. The appliance is now ready to use.

i For time change you must not set a clock function (Minute Minder, Duration or End) or an oven function at the

same time. Make sure that the child safety device is not set.

i To use the oven, push the retractable knob. The knob then comes out.

Switch the oven on

Turn the oven functions selector to a oven function. The power indicator comes on. The temperature display shows the suggested temperature for the oven function set. The oven starts to heat up. When the temperature is reached, an acoustic signal sounds.


Changing the oven temperature

Turn the + / - knob to raise or lower temperature. The setting changes in 5°C steps.

Controlling the temperature

Push Pyrolyse time and Selection buttons at the same time (refer to section "Clock function"). The temperature display shows the current oven temperature.

Switching the oven off

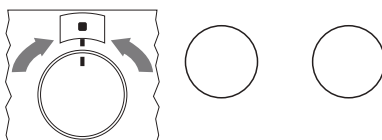

Turn the oven functions selector to the OFF position.

Cooling fan

When the appliance operates, the cooling fan switches on automatically. If you switch off the appliance, the cooling fan continues to operate until the appliance cools down.










Heat- up indicator

If you switch on an oven function, the bars on the display come on one by one. The

bars show that the oven temperature increases.


Oven Functions


The oven has these functions:

Oven function		Application
	Light	Using this function you can light up the oven interior, e.g. for cleaning
	Convection with ring heating element	To bake on maximum three oven levels at the same time. Decrease the oven temperatures (20-40°C) compared with Conventional. And to dry food.
	Conventional	To bake and roast on one oven level.
	Pizza setting	To bake on one oven level food with a more intensive browning and a crispy base. Decrease the oven temperatures (20-40°C) compared with Conventional.
	Convection grilling	To roast larger joints of meat or poultry on one level. Also to gratinate and brown.
	Grill	To grill flat food in the middle of the grill an to toast.
	Dual grill	To grill flat food in large quantities and to toast.
	Bottom heat	To bake cakes with crispy or crusty bases and to preserve food.
	Pyroluxe menu	For automatic pyrolytic cleaning of the oven. It burns off residual dirt in the oven. The oven heats up to approximately 500°C.


Inserting the oven accessories

Put in the slide-in accessories so that the double side edges are at the back of the oven and point down to the bottom. Push the slide-in accessories between the guide-bars of one of the oven levels.

-  The deep roasting pan and the oven shelf have double side edges. These edges and the shape of the guide-bars causes the anti-tilt safety for the oven accessories.

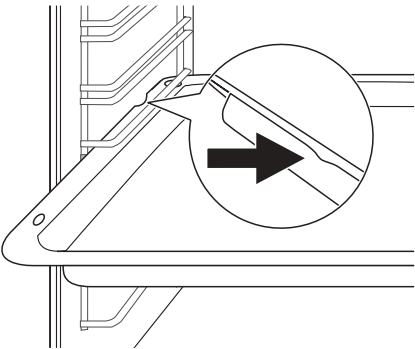


Inserting the oven shelf and deep roasting pan together

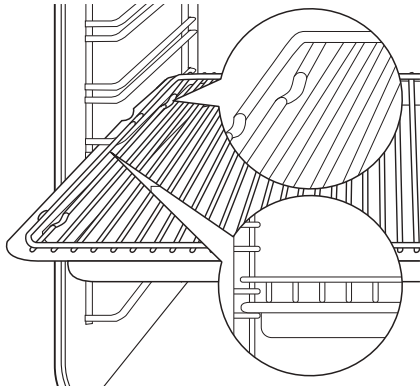




Put the oven shelf on the deep roasting pan. Push the deep roasting pan between the guide-bars of one of the oven levels.

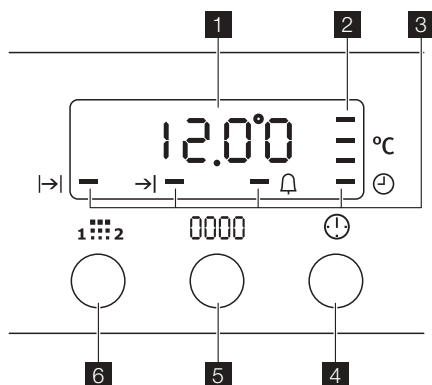Clock Functions



 - 1 Temperature / Time display
- 2 Heat indicator
- 3 Clock function indicators
- 4 Selection button
- 5 Change display
- 6 Pyrolyse time



Setting the clock functions



 
 
1. Set an oven function and temperature (not necessary for Time of day and Minute Minder).
2. Push the Selection button again and again until the desired function indicator flashes.
3. To set the time for Minute Minder , Duration  or End , use the + / - knob. The related function indicator comes on.


 
 
 
When the time period is completed, the related function indicator flashes, the display shows 0.00 and an acoustic signal sounds.

4. To stop the signal and the flashing:
 - with Minute Minder push a button
 - with Duration and End turn the oven functions selector to the position Off.

i With Minute Minder an acoustic signal also sounds when 90% of the time period is completed.

i With the functions Duration  and End  the oven switches off automatically.

Clock function		Application
	Time of day	Shows the time. To set, change or check the time.
	Minute Minder	To set a countdown time. A signal sounds, after the time period is completed. This function has no effect on the operation of the oven.
	Duration	To set how long the oven has to be in operation.
	End	To set the switch-off time for an oven function.

i Duration  and End  can be used at the same time, if the oven is to be switched on and off automatically later. First set Duration , then End .

Change display button

Use the change display button to switch between the oven temperature and the time.

Other Functions

Switch on lock

When the switch on lock is switched on, you cannot operate the oven. It makes sure that children do not accidentally switch on the appliance.

Important! Do not set an oven function.

Switching on the switch on lock:

1. Turn + / - control knob to the left and hold it.

Oven temperature	Switch-off time
30 - 120 °C	12.5 h.
120 - 200 °C	8.5 h.
200 - 250 °C	5.5 h.
250 - max. °C	3.0 h.

After an automatic cut-out, switch off the oven fully. Then you can switch it on again.


i If you set clock function Duration or End, the automatic cut-out will not operate.

Mechanical door lock

When the appliance is delivered, the door lock is deactivated.

Activating and Deactivating the door lock

1. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards.

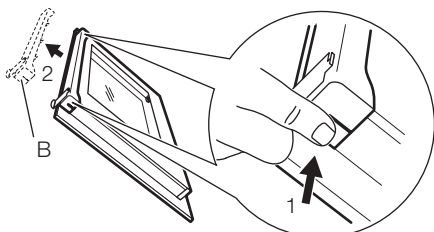

2. For activating, step a. For Deactivating step b.
 - a) **Activate** Doorlock: Remove lever (1), move it 4 mm to the left (2) and re-insert (3).


2. Push Selection button until the display shows "SAFE".

The switch on lock device is switched on. To switch off the switch on lock device repeat the same procedure as for switching on the switch on lock.


Oven automatic cut-out

The appliance switches off after some time:


- if you do not switch off the appliance.
- if you do not change the oven temperature.

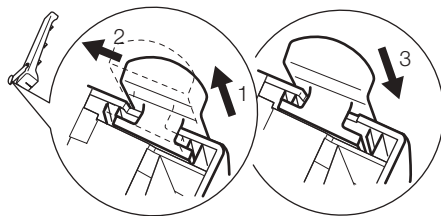


- b) **Deactivate** Doorlock: Demount lever: Remove lever (1).

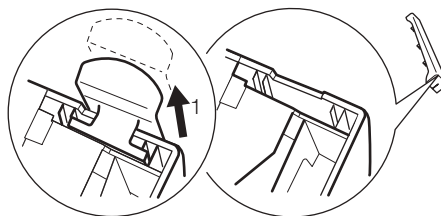


Remove trim (2) from the under side of the door trim (B) and push in (3).

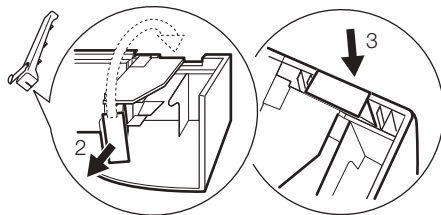

3. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

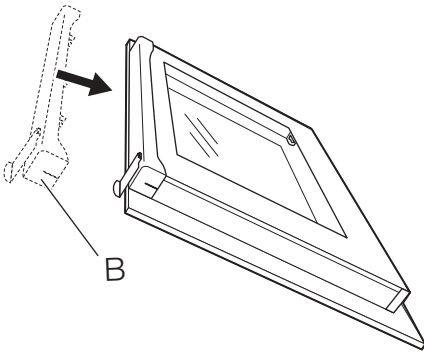


Important! There is a guide bar (C) on the open side of the door trim (B). This must be pushed between the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

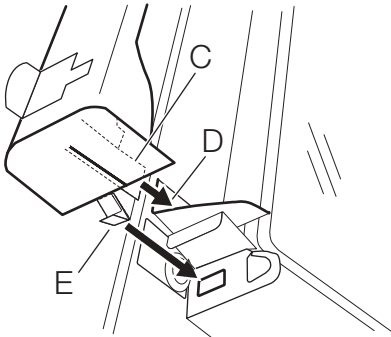

To open the oven door.

1. Keep lever pressed.
2. Open the door.

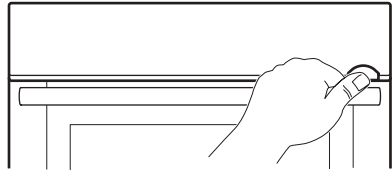

To close the oven door

Close door without pressing the lever.

To deactivate door lock

To deactivate the door lock, the lever is moved to the right again. Proceed as described above.

Important! Switching off the appliance does not remove the mechanical door lock.

HELPFUL HINTS AND TIPS

Inner side of door

On the inner side of the oven door you can find:

- the numbers of the shelf levels
- information about the oven functions, recommended shelf levels and temperatures for typical dishes.

i The temperature and baking times in the tables are guidelines only. They depend on the recipes, quality and quantity of the ingredients used.

Baking

General instructions

- Your new oven may bake or roast differently to the appliance you had before.

Adapt your usual settings (temperature, cooking times) and shelf levels to the values in the tables.

- With longer baking times, the oven can be switched off about 10 minutes before the end of baking time, to use the residual heat.

When you use frozen food, the trays in the oven can twist during baking. When the trays get cold again, the distortion will be gone.

How to use the Baking Tables

- We recommend to use the lower temperature the first time.
- If you cannot find the settings for a special recipe, look for the one that is almost the same.





 


- Baking time can be extended by 10-15 minutes, if you bake cakes on more than one level.
- Cakes and pastries at different heights do not always brown equally at first. If





this occurs, do not change the temperature setting. The differences equalize during the baking procedure.

Tips on baking

Baking results	Possible cause	Remedy
The cake is not browned sufficiently below	Incorrect oven level	Put the cake on a lower oven level
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a lower setting
The cake sinks (becomes soggy, lumpy, streaky)	Baking time is too short	Set a longer baking time Do not set higher temperatures to decrease baking times
The cake sinks (becomes soggy, lumpy, streaky)	Too much liquid in the mixture	Use less liquid. Look at the mixing times, specially when you use mixing machines
Cake is too dry	Oven temperature too low	Set a higher oven temperature
Cake is too dry	Baking time too long	Set a shorter baking time
Cake does not brown equally	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
Cake does not brown equally	No equal mixture	Put the mixture equally on the baking tray
Cake does not cook in the baking time set	Temperature too low	Use a slightly higher oven temperature setting













Baking on one oven level - Baking in tins


Type of baking	Oven function		Level	Temperature (°C)	Time (h:min)
Ring cake or brioche		Convection with ring heating element	1	150 - 160	0:50 - 1:10
Madeira cake/Fruit cakes		Convection with ring heating element	1	140 - 160	1:10 - 1:30
Sponge cake		Convection with ring heating element	1	140	0:25 - 0:40
Sponge cake		Conventional	1	160	0:25 - 0:40
Flan base - short pastry ¹⁾		Convection with ring heating element	3	170-180	0:10 - 0:25
Flan base - sponge mixture		Convection with ring heating element	3	150 - 170	0:20 - 0:25
Apple pie		Conventional	1	170 - 190	0:50 - 1:00

Type of baking	Oven function		Level	Temperature (°C)	Time (h:min)
Apple pie (2 tins, Ø 20 cm, diagonally off set)		Convection with ring heating element	1	160	1:10 - 1:30
Apple pie (2 tins, Ø 20 cm, diagonally off set)		Conventional	1	180	1:10 - 1:30
Savoury flan (e.g. quiche lorraine)		Convection with ring heating element	1	160 - 180	0:30 - 1:10
Curd Cheese Cake		Conventional	1	170 - 190	1:00 - 1:30

1) Pre-heat oven

Baking on one oven level - Cakes/pastries/breads on baking trays













Type of baking	Oven function		Level	Temperature (°C)	Time (h:min)
Plaited bread/bread crown		Conventional	3	170 - 190	0:30 - 0:40
Christmas stollen ¹⁾		Conventional	3	160 - 180	0:40 - 1:00
Bread (rye bread)		Conventional	1		
- first of all ¹⁾				230	0:25
- then				160 - 180	0:30 - 1:00
Cream puffs/eclairs ¹⁾		Conventional	3	160 - 170	0:15 - 0:30
Swiss roll ¹⁾		Conventional	3	180 - 200	0:10 - 0:20
Cake with crumble topping (dry)		Convection with ring heating element	3	150 - 160	0:20 - 0:40
Buttered almond cake/sugar cakes ¹⁾		Conventional	3	190 - 210	0:15 - 0:30
Fruit flans (made with yeast dough / sponge mixture) ²⁾		Convection with ring heating element	3	150	0:35 - 0:50
Fruit flans (made with yeast dough / sponge mixture) ²⁾		Conventional	3	170	0:35 - 0:50
Fruit flans made with short pastry		Convection with ring heating element	3	160 - 170	0:40 - 1:20
Yeast cakes with delicate toppings (e.g. quark, cream, custard) ¹⁾		Conventional	3	160 - 180	0:40 - 1:20
Pizza (with a lot of topping) ¹⁾²⁾		Convection with ring heating element	1	180 - 200	0:30 - 1:00
Pizza (thin crust) ¹⁾		Convection with ring heating element	1	200 - 220	0:10 - 0:25

Type of baking	Oven function		Level	Temperature (°C)	Time (h:min)
Unleavened bread		Convection with ring heating element	1	200 - 200	0:08 - 0:15
Tarts (CH)		Convection with ring heating element	1	180 - 200	0:35 - 0:50

1) Pre-heat oven

2) Use the deep roasting pan

Baking on one oven level - Biscuits

Type of baking	Oven function		Level	Temperature (°C)	Time (h:min)
Short pastry biscuits		Convection with ring heating element	3	150 - 160	0:06 - 0:20
Viennese whirls		Convection with ring heating element	3	140	0:20 - 0:30
Viennese whirls ¹⁾		Conventional	3	160	0:20 - 0:30
Biscuits made with sponge mixture		Convection with ring heating element	3	150 - 160	0:15 - 0:20
Pastries made with egg white, meringues		Convection with ring heating element	3	80 - 100	2:00 - 2:30
Macaroons		Convection with ring heating element	3	100 - 120	0:30 - 0:60
Biscuits made with yeast dough		Convection with ring heating element	3	150 - 160	0:20 - 0:40
Puff pastries ¹⁾		Convection with ring heating element	3	170 - 180	0:20 - 0:30
Rolls ¹⁾		Convection with ring heating element	3	160	0:20 - 0:35
Rolls ¹⁾		Conventional	3	180	0:20 - 0:35
Small cakes (20 per tray) ¹⁾		Convection with ring heating element	3	140	0:20 - 0:30
Small cakes (20 per tray) ¹⁾		Conventional	3	170	0:20 - 0:30

1) Pre-heat oven

Baking on more than one level - Cakes/pastries/breads on baking trays

Type of baking	Convection with ring heating element 2 levels	Convection with ring heating element 3 levels	Temperature (°C)	Time (h:min)
Cream puffs / Eclairs ¹⁾	1 / 4	---	160 - 180	0:35 - 0:60
Dry streusel cake	1 / 3	---	140 - 160	0:30 - 0:60

1) Pre-heat oven

Baking on more than one level - Biscuits/small cakes/pastries/rolls

Type of baking	Convection with ring heating element 2 levels	Convection with ring heating element 3 levels	Temperature (°C)	Time (h:min)
Short pastry biscuits	1 / 3	1 / 3 / 5	150 - 160	0:15 - 0:35
Viennese whirls	1 / 3	1 / 3 / 5	140	0:20 - 0:60
Biscuits made with sponge mixture	1 / 3	---	160 - 170	0:25 - 0:40
Biscuits made with egg white, meringues	1 / 3	---	80 - 100	2:10 - 2:50
Macaroons	1 / 3	---	100 - 120	0:40 - 1:20
Biscuits made with yeast dough	1 / 3	---	160 - 170	0:30 - 0:60
Puff pastries ¹⁾	1 / 3	---	170 - 180	0:30 - 0:50
Rolls	1 / 4	---	160	0:30 - 0:45
Small cakes (20 per tray) ¹⁾	1 / 4	---	140	0:25 - 0:40

1) Pre-heat oven

Pizza setting table

i To see which oven function you must use please refer to the oven functions list in Daily use chapter.

Type of baking	Shelf level	Temperature °C	Time (Mins)
Pizza (thin crust) ¹⁾	1	180 - 200	20 - 30
Pizza (with a lot of topping)	1	180 - 200	20 - 30
Tarts	1	180 - 200	45 - 60
Spinach flan	1	160 - 180	45 - 60
Quiche Lorraine	1	170 - 190	40 - 50
Curd Cheese Cake , round	1	140 - 160	60 - 90
Curd Cheese Cake on tray	1	140 - 160	50 - 60
Apple cake, covered	1	150 - 170	50 - 70
Vegetable pie	1	160 - 180	50 - 60

Type of baking	Shelf level	Temperature °C	Time (Mins)
Unleavened bread ¹⁾	1	250 - 270	10 - 20
Puff pastry flan ¹⁾	1	160 - 180	40 - 50
Flammekuchen (Pizza-like dish from Alsace) ¹⁾	1	250 - 270	12 - 20
Piroggen (Russian version of calzone) ¹⁾	1	180 - 200	15 - 25

1) Pre-heat the oven

Table for Bakes and Gratin

Dish	Oven function		Shelf level	Temperature °C	Time Hr : Min
Pasta bake	==	Conventional	1	180-200	0:45-1:00
Lasagne	==	Conventional	1	180-200	0:25-0:40
Vegetables au gratin ¹⁾	⦿	Convection with ring heating element	1	160-170	0:15-0:30
Baguettes topped with melted cheese ¹⁾	⦿	Convection with ring heating element	1	160-170	0:15-0:30
Sweet bakes	==	Conventional	1	180-200	0:40-0:60
Fish bakes	==	Conventional	1	180-200	0:30-1:00
Stuffed vegetables	⦿	Convection with ring heating element	1	160-170	0:30-1:00

1) preheat the oven

Ready meals

Food to be cooked	Oven function		Shelf level	Temperature °C	Time
Frozen pizza	==	Conventional	3	refer to instructions of the manufacturer	refer to instructions of the manufacturer
Chips ¹⁾	⦿	Convection with ring heating element	3	200-220	refer to instructions of the manufacturer
Baguettes	==	Conventional	3	refer to instructions of the manufacturer	refer to instructions of the manufacturer
Fruit flans	==	Conventional	3	refer to instructions of the manufacturer	refer to instructions of the manufacturer


1) Comment: Turn chips 2 or 3 times during cooking

Roasting

 



Roasting dishes

- Use heat-resistant ovenware to roast (please read the instructions of the manufacturer).

- Large roasting joints can be roasted directly in the deep roasting pan or on the oven shelf above the deep roasting pan. (If present)





- Roast lean meats in a roasting tin with a lid. This will keep the meat more succulent.
 - All types of meat, that can be browned or have crackling, can be roasted in the roasting tin without the lid.
-  The data in the table is for guidance only.
- Tips on using the roasting table.**
- Roast meat and fish that weighs more than 1 kg .
 - Put some water in the roasting tray to prevent meat juices or fat from burning to the pan.
 - Turn the meat if it is necessary (after 1/2 - 2/3 of the cooking time).
 - For better results, baste large pieces of meat and poultry with the cooking juices several times during the cooking time.
 - Stop the oven approximately 10 minutes before the end of roasting time to use the residual heat.

Beef



Type of meat	Quantity	Oven function		Shelf level	Temperature °C	Time (h:min)
Port roast	1 - 1,5 kg		Conventional	1	200 - 250	2:00 - 2:30
Roast beef or fillet						for each cm of thickness
- rare ¹⁾	for each cm of thickness		Convection grilling	1	190 - 200	0:05 - 0:06
- medium	for each cm of thickness		Convection grilling	1	180 - 190	0:06 - 0:08
- well done	for each cm of thickness		Convection grilling	1	170 - 180	0:08 - 0:10

1) preheat the oven



Pork

Type of meat	Quantity	Oven function		Shelf level	Temperature °C	Time (h:min)
Shoulder, neck, ham joint	1 - 1.5 kg		Convection grilling	1	160 - 180	1:30 - 2:00
Chop, spare rib	1 - 1.5 kg		Convection grilling	1	170 - 180	1:00 - 1:30
Meat loaf	750 g - 1 kg		Convection grilling	1	160 - 170	0:45 - 1:00
Porkknuckle (precooked)	750 g - 1 kg		Convection grilling	1	150 - 170	1:30 - 2:00




Veal

Type of meat	Quantity	Oven function		Shelf level	Temperature °C	Time (h:min)
Roast Veal	1 kg		Convection grilling	1	160 - 180	1:30 - 2:00
Knuckle of veal	1,5 -2 kg		Convection grilling	1	160 - 180	2:00 - 2:30

Lamb

Type of meat	Quantity	Oven function		Shelf level	Temperature °C	Time (h:min)
Leg of lamb, roast lamb	1 - 1,5 kg		Convection grilling	1	150 - 170	1:15 - 2:00
Saddle of lamb	1 - 1,5 kg		Convection grilling	1	160 - 180	1:00 - 1:30

   Game


Type of meat	Quantity	Oven function		Shelf level	Temperature °C	Time (h:min)
Saddle of hare, leg of hare ¹⁾	up to 1 kg		Conventional	3	220 - 250	0:25 - 0:40
Saddle of venison	1,5 - 2 kg		Conventional	1	210 - 220	1:15 - 1:45
Haunch of venison	1,5 - 2 kg		Conventional	1	200 - 210	1:30 - 2:15

1) preheat the oven

Poultry

Type of meat	Quantity	Oven function		Shelf level	Temperature °C	Time (h:min)
Poultry portions	200 - 250 g each		Convection grilling	1	200 - 220	0:35 - 0:50
Half chicken	400 - 500 g each		Convection grilling	1	190 - 210	0:35 - 0:50
chicken, poulard	1 - 1,5 kg		Convection grilling	1	190 - 210	0:45 - 1:15
Duck	1.5 - 2 kg		Convection grilling	1	180 - 200	1:15 - 1:45
Goose	3.5 - 5 kg		Convection grilling	1	160 - 180	2:30 - 3:30
Turkey	2.5 - 3.5 kg		Convection grilling	1	160 - 180	1:45 - 2:30
Turkey	4 - 6 kg		Convection grilling	1	140 - 160	2:30 - 4:00

Fish (steamed)


Type of meat	Quantity	Oven function		Shelf level	Temperature °C	Time (h:min)
Whole fish	1 - 1,5 kg		Conventional	1	210 - 220	0:45 - 1:15

Grilling

Always use the grilling function with maximum temperature setting

Important! Always grill with the oven door closed

- Set the shelf in the shelf level as recommended in the grilling table.
- Always set the pan to collect the fat into the first shelf level.
- Grill only flat pieces of meat or fish.

 Always pre-heat the empty oven with the grill functions for 5 minutes.

i To see which oven function you must use please refer to the oven functions list in Daily use chapter.

Food to grill	Shelf level	Time	
		1st side	2nd side
Burgers	4	8 - 10 mins.	6 - 8 mins.
Pork fillet	4	10 - 12 mins.	6 - 10 mins.
Sausages	4	8 - 10 mins.	6 - 8 mins.
Filet steaks, veal steaks	4	6 - 7 mins	5 - 6 mins.
Filet of beef, roast beef (approximately 1 kg)	3	10 - 12 mins.	10 - 12 mins.
Toast ¹⁾	3	4 - 6 mins.	3 - 5 mins.
Toast with topping	3	6 - 8 mins.	-----

1) Do not pre-heat

Preserving

- Only use usual preserving jars of the same dimension.
- Do not use jars with twist-off or bayonet type lids and metal tins.
- Use the first shelf level from the bottom.
- Use the baking tray. You can put six 1-litre jars maximum on it.
- Fill all the jars to the same level and close them correctly.
- Put the jars on the shelf, make sure that they do not touch each other.

- Fill approximately 1/2 litre of water into the flat baking tray to have sufficient moisture in the oven.
- When the liquid lightly starts to bubble in the first jars (after about 35-60 minutes with 1 litre jars), switch off the oven or decrease the temperature to 100°C (see table).

i To see which oven function you must use please refer to the oven functions list in Daily use chapter.

Soft fruit

Preserve	Temperature in °C	Time until simmering in mins.	Continue to cook at 100°C in mins.
Strawberries, blueberries, raspberries, ripe gooseberries	160 - 170	35 - 45	---
Unripe gooseberries	160 - 170	35 - 45	10 - 15

Stone fruit

Preserve	Temperature in °C	Time until simmering in mins.	Continue to cook at 100°C in mins.
Pears, quinces, plums	160 - 170	35 - 45	10 - 15


Vegetables

Preserve	Temperature in °C	Time until simmering in mins.	Continue to cook at 100°C in mins.
Carrots ¹⁾	160 - 170	50 - 60	5 - 10
Cucumbers	160 - 170	50 - 60	---
Mixed pickles	160 - 170	50 - 60	15
Kohlrabi, peas, asparagus	160 - 170	50 - 60	15 - 20

1) Leave standing in oven when switched off

Drying

- Cover the oven shelves with baking parchment.

 To see which oven function you must use please refer to the oven functions list in Daily use chapter.

Vegetables


Food to be dried	Temperature in °C	Shelf level		Time in hours (Guideline)
		1 level	2 levels	
Beans	60 - 70	3	1 / 4	6 - 8
Peppers (strips)	60 - 70	3	1 / 4	5 - 6
Vegetables for soup	60 - 70	3	1 / 4	5 - 6
Mushrooms	50 - 70	3	1 / 4	6 - 8
Herbs	40 - 50	3	1 / 4	2 - 3

Fruit

Food to be dried	Temperature in °C	Shelf level		Time in hours (Guideline)
		1 level	2 levels	
Plums	60 - 70	3	1 / 4	8 - 10
Apricots	60 - 70	3	1 / 4	8 - 10
Apple slices	60 - 70	3	1 / 4	6 - 8
Pears	60 - 70	3	1 / 4	6 - 9

Defrosting

- Put the food out of the packaging and set it on a plate on the oven shelf.
- Do not cover with a plate or bowl. This can extend the time to defrost very much.
- Put the oven shelf in the first shelf level from the bottom.

 To see which oven function you must use please refer to the oven functions list in Daily use chapter.

Dish	Defrosting time (mins)	Further defrosting time (mins)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate Turn halfway through
Meat, 1000 g	100-140	20-30	Turn halfway through
Meat, 500 g	90-120	20-30	Turn halfway through
Trout, 150g	25-35	10-15	-----
Strawberries, 300g	30-40	10-20	-----
Butter, 250g	30-40	10-15	-----
Cream, 2 x 200g	80-100	10-15	Cream can also be whipped when still slightly frozen in places
Gateau, 1400g	60	60	-----

Information on acrylamides

Important! According to the newest scientific knowledge, if you brown food (specially the one which contains starch),

acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

CARE AND CLEANING

Warning! Refer to "Safety information" chapter.

- Clean the front of the appliance with a soft cloth with warm water and cleaning agent.
- To clean metal surfaces use a usual cleaning agent
- Clean the oven interior after each use. Thus you can remove dirt more easily and it does not burn on.
- Clean stubborn dirt with a special oven cleaner.
- Clean all oven accessories (with a soft cloth with warm water and cleaning agent) after each use and let them dry.
- If you have nonstick accessories, do not clean them using an aggressive agents, sharp edged objects or dishwasher. It can destroy nonstick coating!

Pyrolytic cleaning

1. Remove all parts from the oven.

i If you do not remove the shelf support rails, the clock display shows 'C1' and pyrolytic cleaning procedure cannot start.

2. Remove the worst of the residue manually.
3. Set oven function Pyroluxe menu **⋮**
 - " **PYR 1** " appears in the display,
 - Duration **|→|** flashes for approximately 5 seconds.

While Duration **|→|** flashes, press the Pyrolyse time button to set the necessary length for the procedure.

- For more dirt, press the button once to set " **PYR 1** " (3:15 - Pyroluxe menu intensive).
- For less dirt press the button twice to set " **PYR 2** " (2:15 - Pyroluxe menu light).

i If Duration **|→|** no longer flashes, push the Selection button again and then set length for the pyrolytic procedure.

You can also change switch off time for pyrolytic cleaning using the clock function End **→|** (within 2 minutes of the pyrolytic cleaning starts).


4. Pyrolytic cleaning starts.

i During pyrolytic cleaning the light does not operate.
When the oven reaches pre-set temperature, the door locks.
The bars of the heat indicator come up, until the door unlocks again.


Shelf Support Rails

Removing the shelf support rails

1. Pull the front of the shelf support rail away from the side wall.

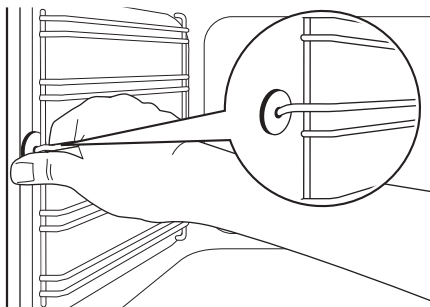

2. Pull the rear shelf support rail away from the side wall and remove it.

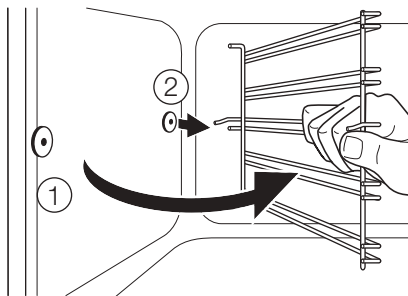

Installing the shelf support rails

Install the shelf support rails in opposite sequence.

i The rounded ends of the shelf support rails must point to the front!

Oven lamp

Warning! There is a danger of electrical shock!

Before you change the oven lamp:

- Switch off the oven.

- Remove the fuses in the fuse box or switch off the circuit breaker.
- i** Put a cloth on the bottom of the oven for protection of the oven light and glass cover.

Replacing the oven lamp

1. You can find the lamp glass cover at the back of the cavity.
Turn the lamp glass cover counterclockwise to remove it.
2. Clean the glass cover.
3. Replace the oven lamp with applicable 300°C heat-resistant oven lamp.

Important! Use the same oven lamp type.
4. Install the glass cover.


Oven door and glass panels

To clean the oven door remove it.


! **Caution!** Be careful when you remove the door from the appliance. The door is heavy!

Removing the oven door

1. Open the oven door as far as it goes.
2. Lift up clamping levers (A) on the two door hinges fully.

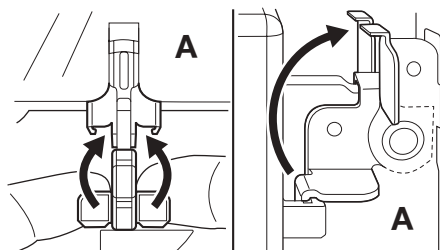

3. Close the oven door until the first position (angle approx. 45°).

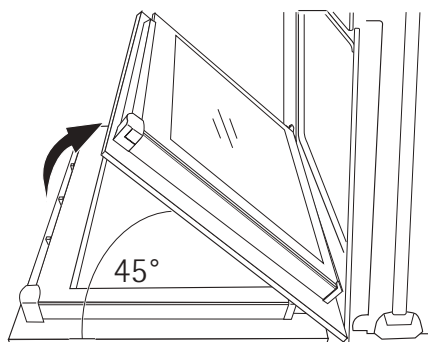


4. Hold of the oven door with one hand on each side and pull it away from the oven at an upwards angle.


- i** Put the oven door with the outer side down on a soft and level surface to prevent scratches.
5. Now you can remove the inner glass panels and clean them.
To install the door follow the procedure in reverse.
 - i** The oven door has 2, 3 or 4 panels of glass (depends on the model)

Removing and cleaning the door glasses

1. Hold the door trim (B) on the top edge of the door at the two sides and push inwards to release the clip seal.

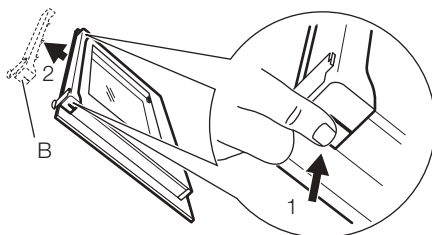


2. Pull the door trim to the front to remove it.

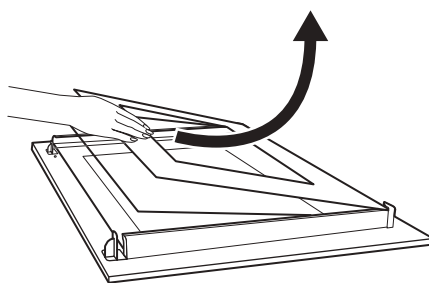

3. Hold the door glass panels on their top edge one by one and pull them upwards out of the guide
4. Clean the door glass panels.
To install panels follow the procedure in reverse. Insert the smaller panel first, then the larger.

WHAT TO DO IF...

 **Warning!** Refer to "Safety information" chapter.

Problem	Possible cause	Remedy
The oven does not heat up	The oven is not switched on	Switch on the oven
The oven does not heat up	The clock is not set	Set the clock
The oven does not heat up	The necessary settings are not set	Control the settings
The oven does not heat up	The fuse in the fuse box is re-leased	Control the fuse. If the fuse is re-leased more than one time, refer to a qualified electrician.
The oven lamp does not operate	The oven lamp is defective	Replace the oven lamp
The pyrolysis function does not operate (the time display shows "C1")	Shelf support rails/oven shelf runners are not removed	Remove shelf support rails / oven shelf runners
The time display shows "F2"	Door is not closed correctly	Close the door correctly
The time display shows "F2"	The door lock is defective	Switch the appliance off and on again through the fuse or the safety switch in the fuse box. If the display shows the error message again, refer to the Service Force Centre
The time display shows an error code which is not in the list	Electronic error	Switch the appliance off and on again through the fuse or the safety switch in the fuse box. If the display shows the error message again, refer to the Service Force Centre

If you cannot find a solution to the problem yourself, contact your dealer or the service centre.


The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the oven cavity.

We recommend that you write the data here:

Model (MOD.)
Product number (PNC)
Serial number (S.N.)

.....
.....
.....

ENVIRONMENT CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be

caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



Packaging material

The packaging material is environmentally-friendly and recyclable. Plastic parts are marked with international ab-

breviations such as PE, PS, etc. Dispose of the packaging material in the containers provided for this purpose at your local waste management facility.



www.electrolux.com/shop

